


## **Application Drawing**

## **Connection Guide** 2 Rooms with 4 Antennas

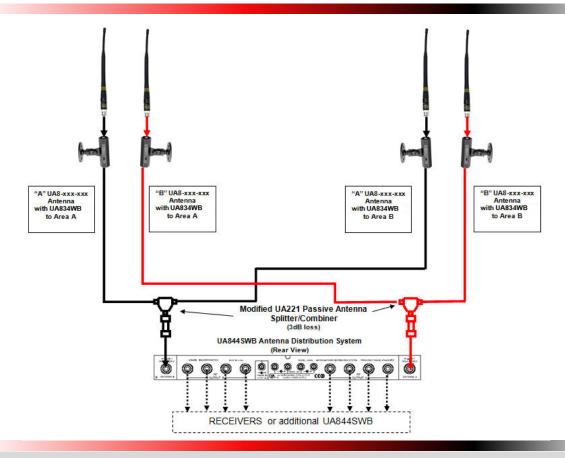



## **Parts List**

Four - Shure UA8 1/2 wave antennas

One - Shure UA221 kit\* Four - Shure UA834WB in line amplifiers

One - Shure UA844+SWB

\* UA221 must be modified for DC bias and antenna combining. Instructions for this can be found at www.protechm.com/tools

## Notes

- Passive combiners typically result in at least 3dB of loss. Please be sure to include this when calculating cable loss.
- It is important to keep multiple antennas feeding a common receiver input as isolated from each other as possible in order to minimize potential phase cancelation the could result in a dropout.
- The cables and amplifiers should be setup as described using the Shure Wireless Mic Remote Antenna Tools. This tool can be found at www.protechm.com/tools

If you have any questions please contact your local rep. Find more drawings at www.ProTechM.com/tools